



Table of Contents

1	Introduction	36
2	Regulatory and safety requirements	38
3	Installation	41
4	Operation	42
5	Troubleshooting	56
6	Maintenance	59
7	Warehousing and Dismantling	61
8	Technical specifications	62



DANGER

It is necessary to read the whole manual carefully before doing any operation. Keor SPE must be used only in residential and commercial environments.

1.1 Purpose of the manual

The purpose of this manual is to provide the user with instructions for safely installing and using the Keor SPE UPS, also called “equipment” in the rest of the manual.

Only skilled technicians can carry out ordinary maintenance procedures as explained in the appendix.

Extraordinary maintenance operations are not dealt with because they are the sole preserve of the LEGRAND Technical Support Service.

The intended use and configurations envisaged for the equipment as shown in this manual are the only ones allowed by the Manufacturer.

Any other use or configuration must be previously agreed with the Manufacturer in writing, and in this case the written agreement will be attached to the installation and user manuals.

The original text of this publication, drafted in English, is the only reference for the resolution of disputes of interpretation linked to translations into other languages.

1.2 Update of the manual

The manual reflects the state of the art when the equipment was put onto the market. The publication conforms to the directives current on that date. The manual cannot be considered inadequate when new standards come into force or modifications are made to the equipment.

Any addition to the manual the Manufacturer considers appropriate to send to the users, must be kept together with the manual of which they will become an integral part.

The version of the manual updated to its latest release is available on the Internet at <https://ups.legrand.com>

1.3 Guarantee terms

The guarantee terms may vary depending on the country where the UPS is sold. Check the validity and duration with LEGRAND's local sale representative.

If there should be a fault in the product, contact the LEGRAND Technical Support Service which will provide all the instructions on what to do.

Do not send anything back without LEGRAND's prior authorization.

LEGRAND is not responsible for costs such as:

- losses of profits or earnings.
- losses of equipment, data, or software.
- claims by third parties.
- any damage to persons or things due to improper use, unauthorized technical alterations, or modifications.
- any damage to persons or things due to installations where the full compliance with the standard regulating the specific usage applications have not been guaranteed.

The Manufacturer declines all indirect or direct responsibility arising from:

- assembly and cabling made by personnel not fully qualified according to national standards to work on equipment presenting electrical hazards.
- failure to observe the installation and maintenance instructions and use of the equipment which differs from the specifications in the manuals.
- use by personnel who have not read and thoroughly understood the content of the user manual.
- use that does not comply with the specific standards used in the country where the equipment is installed.
- modifications made to the equipment, software, functioning logic unless they have been authorized by the Manufacturer in writing.
- repairs that have not been authorized by the LEGRAND Technical Support Service.
- damage caused intentionally, through negligence, by acts of God, natural phenomena, fire, or liquid infiltration.

1.4 Copyright

The information contained in this manual cannot be disclosed to any third party. Any partial or total duplication of the manual by photocopying or other systems, including electronic scanning, which is not authorized in writing by the Manufacturer, violates copyright conditions and may lead to prosecution.

LEGRAND reserves the copyright of this publication and prohibits its reproduction wholly or in part without previous written authorization.

2 Regulatory and safety requirements

This section contains important safety and operating instructions that should always be followed during the installation, use and maintenance of the UPS.



The UPS operates with dangerous high voltages. Only skilled technicians qualified and authorized by LEGRAND must perform ordinary maintenance operations. Extraordinary maintenance operations must be carried out by LEGRAND Technical Support Service personnel.

- This product should be installed in compliance with installation rules, preferably by a qualified electrician. Incorrect installation and use can lead to risk of electric shock or fire. Before carrying out the installation, read the instructions and take account of the product's specific mounting location. Do not open up, dismantle, alter or modify the device except where specifically required to do so by the instructions. All Legrand products must be opened and repaired exclusively by personnel trained and approved by Legrand. Any unauthorised opening or repair completely cancels all liabilities and the rights to replacement and guarantees. Use only Legrand brand accessories.
- Ensure that the mains voltage, frequency, and output load match those of the UPS (check the product label and the technical specifications).
- If any visible damage is found on the product during the unpacking operation, do not install the UPS and return it to your reseller or distributor.
- Before supplying any load equipment, ensure the UPS is connected to a grounded mains socket.
- Do not attempt to open or disassemble the UPS; there are no user replaceable parts. Opening the case will void the warranty and introduces the risk of electric shock.
- Make sure the UPS is completely turned off when it is transported.
- The detachable power supply cable acts as a separation device. The mains socket must be installed near the UPS and must be easily accessible.
- In case of a mains power supply failure, do not unplug the input cord. Earth continuity must be ensured to the connected loads.
- Do not plug non-computer-related items such as medical, life-support and house electric equipment to the UPS output.
- Do not plug laser printers to the UPS outlets due to their high start-up current.
- The UPS functions with TT and TN systems.
- In case of emergency, immediately turn off the UPS and unplug the input cord from the mains.
- Do not allow any liquid or foreign object to enter the UPS.
- The UPS is intended for indoor installation in a ventilated, controlled indoor environment with a range of temperature between 0°C (+32°F) and +40°C (+104°F) and non-condensing humidity <95%.
- Do not install the UPS in locations with sparks, smoke, and hazardous gas or where there is water and excessive humidity. Dusty, corrosive, and salty environments can damage the UPS.
- Do not plug the UPS input into its own output.
- Do not attach a power strip or surge suppressor to the UPS to avoid potential overloads.

-
- Ensure that the output cables are not longer than 10 meters.
 - Keep a clearance of 20 cm around the UPS for airflow. Avoid exposing it to direct sunlight or installing it near heat emitting appliances.
 - Do not place the UPS near equipment that generate strong electromagnetic fields or sensible to electromagnetic fields.
 - The batteries should be recharged every 3 months if the UPS is not used. To do so, connect the input cord to a grounded mains socket.
 - To safeguard the batteries life, the UPS should be used in an environment with a temperature range between +20°C (+68°F) and +25°C (+77°F).
 - The UPS is equipped with an auto-restart system. In case of return of the input mains after the end of battery operation, the UPS turns on to normal operation by supplying the output loads.
 - The UPS is equipped with an automatic backfeed protection system.
 - When installing the equipment, ensure that the sum of the leakage current of the UPS and the connected equipment does not exceed 3.5 mA.



CAUTION

The batteries inside the UPS are not user replaceable. Servicing of batteries must be performed only by electrical hazard authorized personnel.

A battery can present a risk of electrical shock and burns by high short-circuit circuit current. Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces. The following precautions should be observed when working on batteries:

- a) remove watches, rings or other metal objects.
- b) use tools with insulated handles.
- c) wear rubber gloves and boots.
- d) do not lay tools or metal parts on top of batteries.
- e) disconnect the charging source prior to connecting or disconnecting battery terminals.
- f) determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground.

Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).

- g) never leave live cable terminals without an insulated protection.
- h) When replacing batteries, replace with the same type and number of batteries or battery packs. There is the risk of explosion if batteries are replaced by an incorrect type.

2 Regulatory and safety requirements



CAUTION

Do not dispose of batteries in a fire. The batteries may explode.

Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic. For the disposal requirements refer to local laws and relevant standards.








WARNING

Keor SPE is a category C2 UPS product according to the EN 62040-2


In a residential environment, this product may cause radio interference, in which case the user may be required to take additional measures.

3 Installation

750VA	3 110 60
1000VA	3 110 61
1500VA	3 110 62
2000VA	3 110 63
3000VA	3 110 64

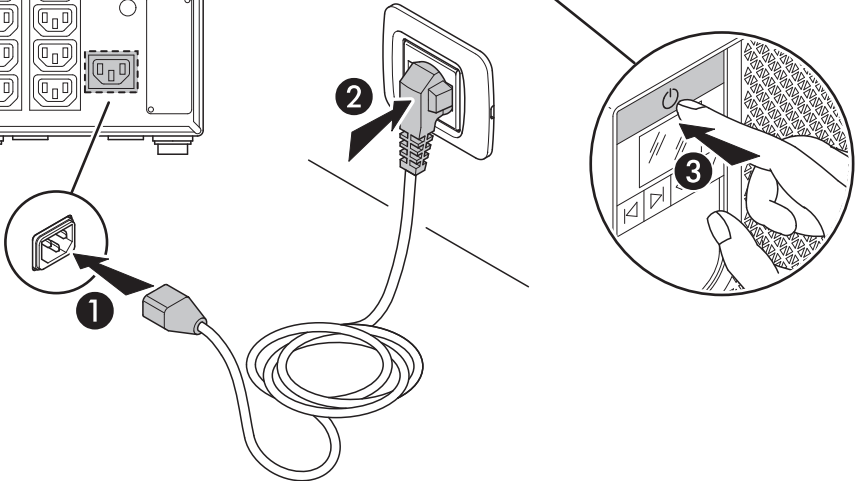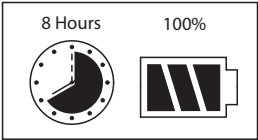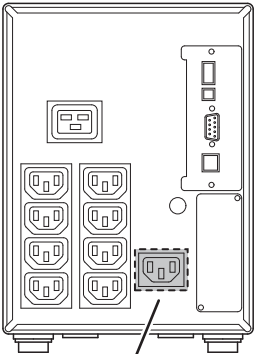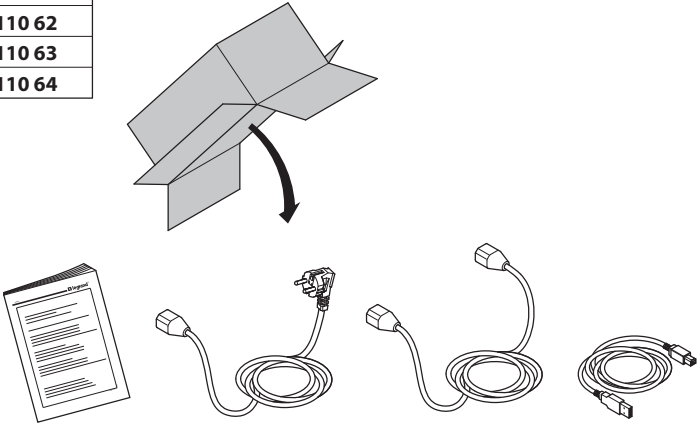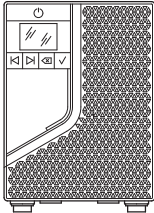


4.1 Overview

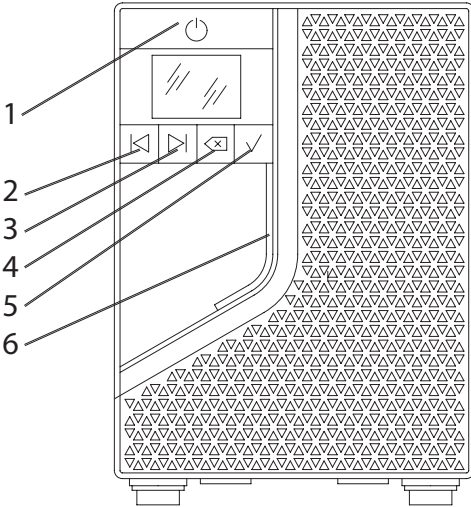


Front View

- 1.ON/OFF button
- 2. Scrolling left
- 3. Scrolling right
- 4. ESC
- 5. Enter
- 6. LED

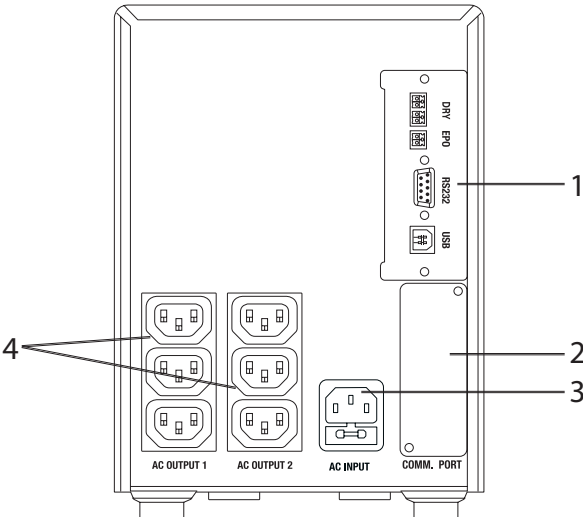


Rear View of 750VA

- 1. Communication Ports
- 2. SNMP Slot
- 3. AC Input Inlet and input fuse
- 4. Outlets

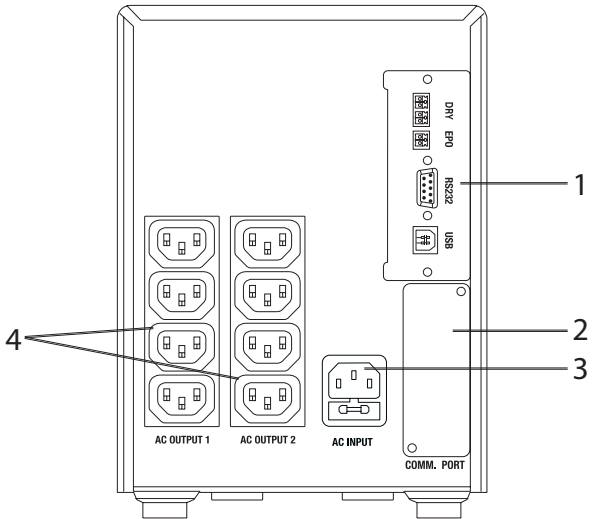


Rear View of 1000VA

- 1. Communication Ports
- 2. SNMP Slot
- 3. AC Input Inlet and input fuse
- 4. Outlets

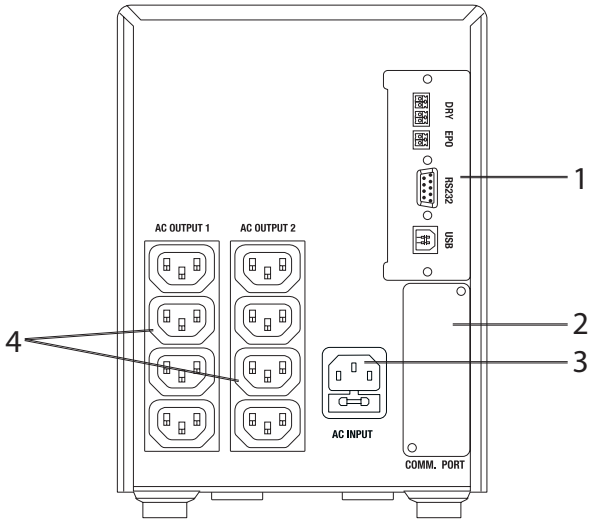


Rear View of 1500VA

- 1. Communication Ports
- 2. SNMP Slot
- 3. AC Input Inlet and input fuse
- 4. Outlets

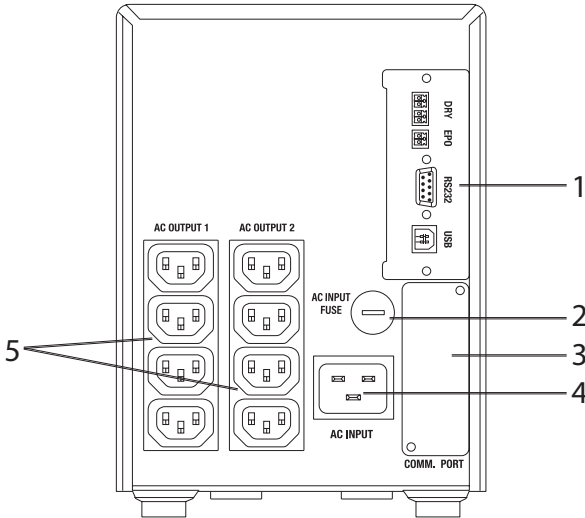

Rear View of 2000VA

1. Communication Ports
2. Input Fuse
3. SNMP Slot
4. AC Input Inlet
5. Outlets

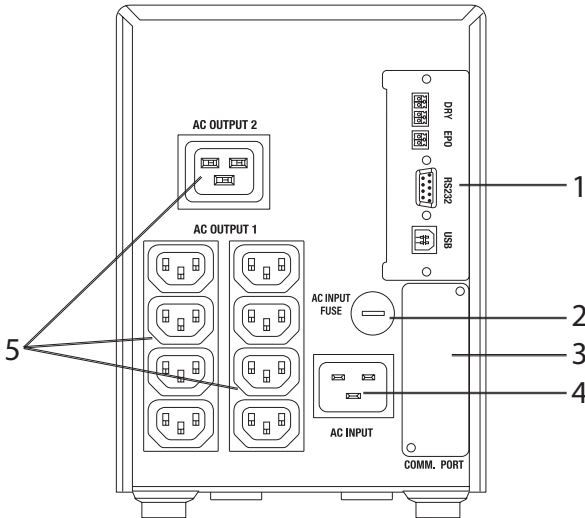

Rear View of 3000VA

1. Communication Ports
2. Input Fuse
3. SNMP Slot
4. AC Input Inlet
5. Outlets

4.2 Start-up procedure

4.2.1 Normal mode

1. Ensure that the mains power supply to be used has a suitable voltage/frequency and an upstream protection rated at either 10A or 16 A (according to the UPS power).
2. Plug the UPS power cord on the UPS inlet on one side and on the mains power supply socket on the other side.
3. The UPS recharges the battery everytime is in standby mode. It is recommended to charge the battery at least 8 hours before connecting the loads.
4. Connect the loads to the UPS outlets. Ensure that the power of the loads can be managed by the UPS.
5. Press the ON/OFF button for 1 second to start-up the UPS and power the loads. The led bar is lit in green with a 1-second-long acoustic signal.

INDICATION

The UPS has an auto-restart function. In case the mains power fails, and the UPS reaches the end of the back-up time, the load will be automatically powered when the mains power is back if the auto-start setting is enabled.

4.2.2 Cold start

1. Make sure the internal battery is fully charged.
2. Connect the loads to the outlets.
3. With the mains absent, press the ON/OFF button for 3 seconds to start-up the UPS and power the loads in battery mode.


INDICATION

The output frequency in this condition is the last one seen by the UPS when the mains input was present.

INDICATION

The very first time the UPS is turned on after its purchase, it is not possible to do it in battery mode (cold start).

4.3 Mute button


When the buzzer is active, press the  button for 0.1 seconds to silence the current alarm. In case of a new alarm, the buzzer will be re-activated automatically. When the buzzer is muted, press the button for 0.1 seconds to turn it on again.

4.4 Shutdown


1. Press and hold the ON/OFF button until the UPS turns off.
2. The UPS stops powering the outlets.
3. Unplug the UPS from the mains power supply socket.

4.5 Battery test

It is possible to execute a manual battery test if the UPS is working in normal mode and the battery is fully charged.


Press and hold the  button for 3 seconds and release it after you hear one beep: the UPS will switch to battery mode and perform a 10-second battery test. After that, UPS will return to line mode.






If the test result is ok, the display will show PAS for 7 seconds, then return to the previously viewed data.

If the test result is abnormal, the display will show FAL for 7 seconds, then return to the previously viewed data. The no-battery/ battery replacement icon () will flash until the ON/OFF button (fault clear) is pressed.

In case of attempting to perform a battery test while the UPS is running in battery mode, the display will show noP for 7 seconds, then return to the previously viewed data.


4.6 Setup mode


It is possible to change some parameters of the UPS while the UPS is in standby or in normal mode. Press and hold the  button for 3 seconds until there is one beep is heard and the SET icon is shown.

Use the  button to enter the parameter to be changed. As confirmation, the value on the digits will start to flash. Press the  button to exit from the parameter. While the selected value flashes, use  and  buttons to change the values of the parameter and confirm the value with the  button. As confirmation, there is one beep and the value on the digits stop to flash.






To exit the setup mode, press and hold the  button for 3 seconds. If no button is pressed, after 1 minute the UPS exits from the setup mode.

The following tables indicate the parameters that can be set in standby mode and in normal mode.

STANDBY MODE	
FUNCTION	DESCRIPTION
SET + 	Buzzer Possible values: on / oFF Default: on
EPO/roo	Setting for the EPO auxiliary contact. Main page EPO: Emergency auxiliary contact to turn off the UPS in case of emergency roo: UPS remote turn on/off Subpage nC: contact normally closed nO: contact normally opened
SET + OUT + V	Output voltage Possible values: 200/208/220/230/240 V Default: 230V
SET + IN + OUT	Auto Restart function Possible values: on / oFF Default: on






NORMAL MODE	
FUNCTION	DESCRIPTION
SET + 	Buzzer Possible values: ON / OFF Default: ON
SET + LOAD 2	Turn on/off load 2 bank Possible values: ON / OFF Default: ON
SET + OUT + V	Output voltage Possible values: 200/208/220/230/240 V Default: 230V
SET + IN + OUT	Auto Restart function Possible values: ON / OFF Default: ON

4.7 Multi-function buttons







	<p>ON / OFF The button has three functions:</p> <ol style="list-style-type: none"> 1. Turn on the UPS 2. Turn off the UPS 3. Fault Clear When the UPS has a fault condition, press and hold the button for 1 second, release it after one beep, and the UPS will clear the fault condition
	<p>LEFT Press the button for 0.1 second to:</p> <ul style="list-style-type: none"> • Normal mode: go to the previous display • Setup mode: decrease a number or change a setting value
	<p>RIGHT Press the button for 0.1 second to:</p> <ul style="list-style-type: none"> • Normal mode: go to the next display • Setup mode: increase a number or change a setting value
	<p>ESC The button has three functions:</p> <ol style="list-style-type: none"> 1. Exiting the Setup Mode In Setup Mode, press and hold the button for 3 seconds to exit the Setup Mode. 2. Exit setting entry without confirm In Setup Mode, press the button for 0.1 seconds to exit the current setting entry without confirm the changes. 3. Battery Test Execute a manual battery test. (normal mode)
	<p>ENTER The button has three functions:</p> <ol style="list-style-type: none"> 1. Mute button To silence an alarm (normal mode). 2. Enter the Setup Mode Press and hold the button for 3 seconds until one beep and the SET icon will be turned on. 3. Confirm In Setup Mode, press the button for 0.1 seconds to: <ul style="list-style-type: none"> • Enable the editing of the current setting. As confirmation, the value on the digits will start to flash. • Save the changes of the current setting. As confirmation, there is one beep and the value on the digits stop to flash.

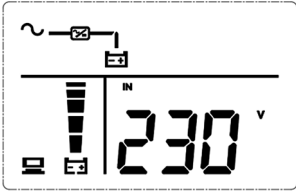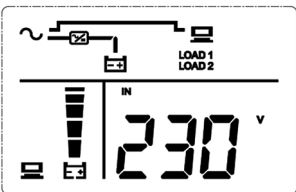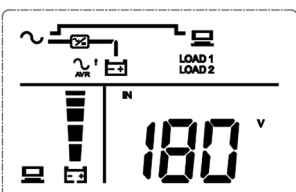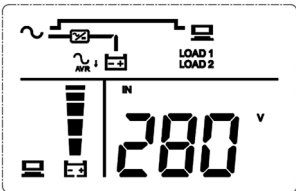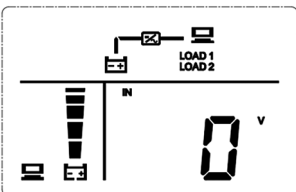

4.8 LCD Display

4.8.1 Working Diagrams


DIAGRAM	MODE	DESCRIPTION
	Standby	The UPS is connected to the mains and the batteries are kept charged. The loads are not powered.
	Normal	The loads are powered directly from the mains while the batteries are kept charged.
	AVR	The input voltage is out of the set window. The internal transformer increases or decreases the output voltage.
		
	Battery	Mains absent. The loads are powered from the batteries.

4.8.2 Icons

ICON	NAME	DESCRIPTION
	AC power	<p>Indicates the input source status.</p> <ul style="list-style-type: none"> • ON: the AC input is within the acceptable input range • Flashing: the AC input is out of the acceptable input range, but it is still enough to charge the battery • OFF: the AC input is out of the acceptable input range and is not enough to charge the battery. It means that UPS is working on battery mode.
	Load banks	<p>Indicates the output status.</p> <ul style="list-style-type: none"> • ON: The load bank 1 or 2 is powered • OFF: The load bank 2 is not powered
	Battery	<p>Indicates the battery status.</p> <ul style="list-style-type: none"> • ON: Battery is normal. • Flashing: Battery abnormal / disconnected
	AVR	The UPS is stabilizing the output voltage.
	Buzzer mute	The buzzer is disabled
	Warning	Indicates that there is an error Refer to par. 5 of the manual for the Fault Error Codes.

ICON	NAME	DESCRIPTION
	Load Level Bar	<p>Indicates the level of the load.</p> <ul style="list-style-type: none"> ON: the bar graph illuminates according to the load level <ul style="list-style-type: none"> 1%-20%: the first segment will illuminate 21%-40%: the first two segments will illuminate. 41%-60%: the first three segments will illuminate. 61%-80%: the first four segments will illuminate. 81%-100%: all segments will illuminate. > 100%: all segments will be illuminated and will flash Flashing: there is an overload condition
	Battery Level Bar	<p>Indicates the level of the battery charge.</p> <ul style="list-style-type: none"> ON: the bar graph illuminates according to the remaining battery capacity <p>Charging mode:</p> <ul style="list-style-type: none"> 0%-19%: the first segment will flash 20%-39%: the first segment will be illuminated, the second segment will flash 40%-59%: the first 2 segments will be illuminated, the third segment will flash 60%-79%: the first 3 segments will be illuminated, the 4th segment will flash 80%-99%: the first 4 segments will be illuminated, the 5th segment will flash 100%: all 5 segments will be illuminated <p>Discharging mode:</p> <ul style="list-style-type: none"> 100%: all 5 segments will be illuminated 99%-80%: the first 4 segments will be illuminated 79%-60%: the first 3 segments will be illuminated 59%-40%: the first 2 segments will be illuminated 39%-20%: the first segment will be illuminated 19%-1%: the first segment will flash 0%: no segments are illuminated <ul style="list-style-type: none"> Flashing: the first segment flashes when a low-battery situation occurs

4.8.3 7-Segment display

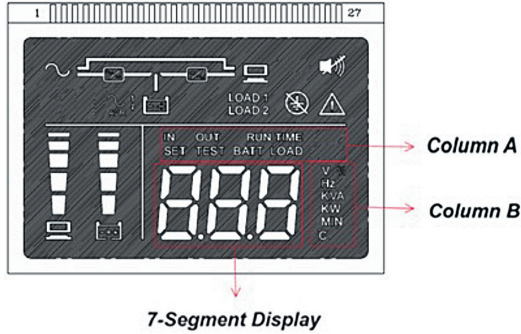

Column A	Column B	DESCRIPTION
IN	V	Input voltage
	Hz	Input frequency
CHARGE	°C	Internal temperature (Celsius degrees)
	%	Total load value, in percentage
	kVA	Total load value (kVA)
	kW	Total load value (kW)
RUN TIME	MIN	Remaining back-up time with the current load (minutes)
BATT	%	Battery Charge level
	V	Battery voltage
OUT	V	Output voltage
	Hz	Output frequency
SET	(divers)	The UPS is in the setup mode
TEST		Battery test in progress

4.9 LED bar and Alarm Indicators


LED BAR			ALARM	UPS STATUS
Green	Yellow	Red		
Fixed (Flashing)	-	-	-	mains present and regular, batteries recharging (The bar is flashing only if the mains is present and load 2 bank is turned off)
-	Fixed	-	Intermittent every 0.5 sec	Warning status
-	Fixed	-	Intermittent every 5 sec	UPS operating in battery mode with battery status >50%
-	Fixed	-	Intermittent every 2 sec	UPS operating in battery mode with battery status <25%
-	Flashing	-	Intermittent every 0.5 sec	End of back-up time
-	Fixed	-	Intermittent every 5 sec	Battery Test
-	-	Fixed	Intermittent every 0.5 sec	- Failure - Battery overload (battery mode) - EPO activation
-	-	Fixed	Continuous sound	Overload shutdown fault
-	Flashing	-	Intermittent (various frequency)	Mains absent and load 2 bank is turned off

4.10 Communication ports

The UPS has a standard RS232 serial port, a USB (type B) port and one SNMP slot. It can be connected to most NAS devices and computers. By connecting the UPS to a computer, it is possible to perform functions like:


- displaying all operating and diagnostic data in case of problems.
- setting special functions like the control of the load banks.
- performing automatic shutdown of all computers powered by the UPS (if connected to the TCP/IP network).

Visit the website ups.legrand.com for more information on network interfaces and software.

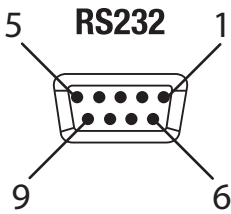

RS232 CONNECTOR:

PIN NO.	PIN DEFINE
1	NA
2	RX
3	TX
4	NA
5	GND
6	NA
7	NA
8	NA
9	NA

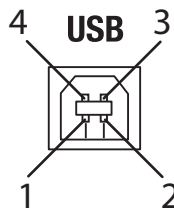


USB CONNECTOR:

PIN NO.	PIN DEFINE
1	SUB_VDD
2	IM
3	IP
4	GND_SELV

4.11 EPO and Dry Contacts

The rear part of the UPS includes an Emergency Power Off (EPO) contact that can be used to connect an emergency pushbutton to turn off the UPS.

The default setting of the EPO contact is nC (normally closed). If you want to change the default status to nO (normally open), follow par. 4.6 to enter setup mode.

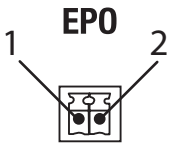

EPO CONNECTOR:

PIN NO.	PIN DEFINE
1	+VCC_SELV
2	GND

There are also other two dry contacts which indicate the following status:

- Pin 1-2: battery low. When the UPS battery is low, the contact changes status. The default setting is nO (normally open).
- Pin 3-4: battery mode. When the UPS turns to stored energy mode, the contact changes status. The default setting is nO (normally open).



DRY CONNECTOR:

PIN NO.	PIN DEFINE
1	DRY_LOW
2	GND
3	DRY_ON
4	GND

INDICATION	POSSIBLE CAUSE	SOLUTION
The UPS works on battery mode even though the mains power is available	The input fuse blew up	Replace the fuse with a new one
	The mains power supply socket is not supplying power to the UPS	Check if the UPS works on another socket. If so, have the first mains power supply socket checked by a skilled technician.
	The input cord is not properly connected	Check that the input cord is properly connected to the inlet and to the mains socket
	Mains out of the allowed UPS input range	A skilled technician should check the mains
Continuous sound alarm sound with the UPS working in normal mode	Overload	Disconnect some non-critical loads from the UPS outlets until the overload ceases
The UPS is working normally but the loads are not powered	-	Check that all power cords are properly connected to the outlets and to the load. If the problem persists, contact the LEGRAND Technical Support Service

INDICATION	POSSIBLE CAUSE	SOLUTION
<p>The UPS does not operate correctly in battery mode: it shuts down immediately or the backup time is greatly reduced</p>	<p>The UPS worked in stored energy mode till the end of operation</p>	<p>Recharge the batteries for at least 8 hours by connecting the UPS to the mains</p>
	<p>The UPS has not been used for many months</p>	<p>Recharge the batteries at least 8 hours by connecting the UPS to the mains. If the batteries are no longer working, contact a skilled technician to replace them.</p>
	<p>The battery has run down due to being used frequently, to ambient conditions, or to having exceeded its average service life</p>	<p>Contact a skilled technician or the LEGRAND Technical Support Service to replace the batteries</p>
<p>Strange noise or smell</p>	<p>UPS fault</p>	<p>Shut down immediately the UPS. Unplug the UPS from the mains socket and contact the LEGRAND Technical Support Service</p>

Fault error codes

ERROR CODE	Description	Does the error turn off the UPS?
LOC	When the UPS is brand new, it is protected from an unwanted power-up during transportation. The very first start-up of the UPS is possible only with the power cord connected to the mains.	-
E01	Inverter voltage high	Y
E02	Inverter voltage low	Y
E03	Output voltage is short	Y
E06	Inverter relay weld	Y
E11	Inverter soft start timeout	Y
E17	Charger voltage high	N
E18	EEPROM communication abnormal	N
E19	Overheating	Y
E20	Overload	Y
E22	Battery disconnected	N
E23	Battery weak	N
E25	Battery voltage low	N
E26	End of operation in stored energy mode	Y
E27	Inverter overtemperature	Y
E28	Fan blocked	N
E29	EPO activated	Y

6 Maintenance



CAUTION

All operations listed in this chapter must be carried out only by a SKILLED TECHNICIAN. This definition refers to people who have specific technical qualification and are aware of the methods of installing, assembling, repairing, and using the equipment safely. The skilled technician is qualified according to national safety standards to work under dangerous electrical voltage and uses the personal protective equipment required by national safety standards.


6.1 Battery Replacement




DANGER

A battery can present a risk of electrical shock and high short circuit current. Before the replacement, it is mandatory the reading of chapter 2. Batteries may only be replaced with the same number and type. Batteries must be brand new. If the battery brand is different from the original one, the estimated battery autonomy indicated on the display of the UPS may not be reliable.

KEOR SPE 750-1000

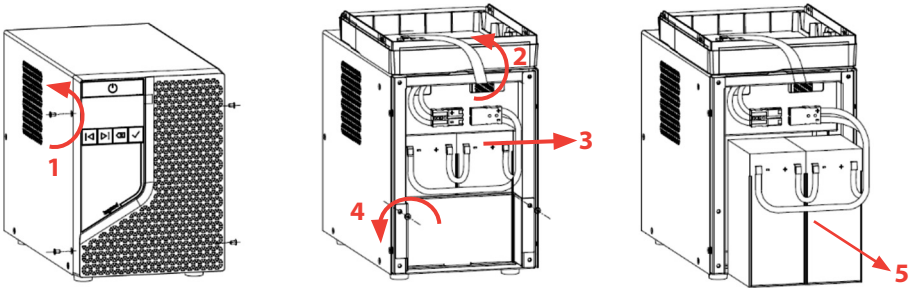

KEOR SPE 1500-2000-3000

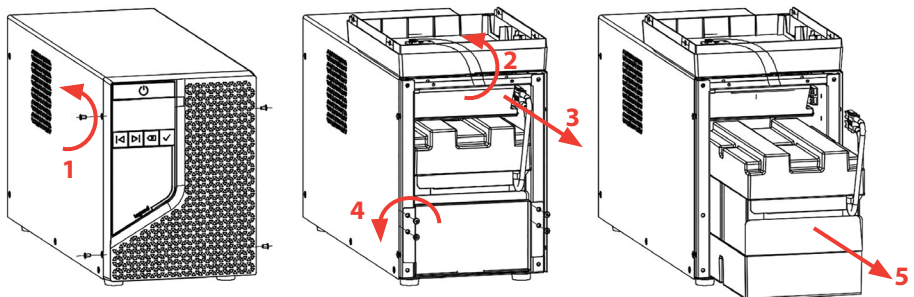

- 1) Turn off the UPS.
 - 2) Unplug the input cord from the mains socket.
 - 3) Using a Phillips head screwdriver, remove the four black screws located on the sides of the UPS (step 1 picture).
 - 4) Place the front plate on the top of the UPS for easy access to the battery connections (step 2 picture).
 - 5) Disconnect the red connector from the battery pack (step 3 picture).
 - 6) Using a Phillips head screwdriver, remove the silver screws from the silver battery pack retaining plate. KEOR SPE 750-1000 has two screws, KEOR SPE 1500-2000-3000 has four screws (step 4 picture).
- Step 5 - Pull on the transparent tab to slide the battery pack out of the UPS.

6.2 Battery information

Model	Battery source 1	Battery source 2
750 VA	2 pcs Minhua type MS7-12	2 pcs Ritar type RT1270
1000 VA	2 pcs Minhua type MS9-12	2 pcs Ritar type RT1290
1500 VA	3 pcs Minhua type MS9-12	3 pcs Ritar type RT1290
2000 VA	4 pcs Minhua type MS9-12	4 pcs Ritar type RT1290
3000 VA	4 pcs Minhua type MS9-12	4 pcs Ritar type RT1290EP

6.3 Fuse replacement

The input socket includes a fuse for 750-1000-1500 VA models. If the fuse must be replaced, unplug the input cord, and use a screwdriver to remove the fuse from the holder. Instead, there is a dedicated fuse holder for the 2000- 3000 VA models.

Model	INPUT FUSE
750 VA	F10AH250V (5 x 20 mm)
1000 VA	
1500 VA	
2000 VA	F20AH250V (6,3 x 32mm)
3000 VA	

7 Warehousing and Dismantling

7.1 Warehousing

The UPS can be stored in an environment with a room temperature between -20°C (-4°F) and $+50^{\circ}\text{C}$ ($+122^{\circ}\text{F}$) and humidity less than 90% (not condensing).

However, it is recommended to store the UPS in an environment with a room temperature between $+20^{\circ}\text{C}$ ($+68^{\circ}\text{F}$) and $+25^{\circ}\text{C}$ ($+77^{\circ}\text{F}$) to preserve the battery life.

The battery installed inside the UPS is lead/acid sealed and does not require maintenance (VRLA). The battery should be charged for 8 hours every 3 months by connecting the UPS to the mains supply socket. Repeat this procedure every two months if the storage ambient temperature is above $+25^{\circ}\text{C}$ ($+77^{\circ}\text{F}$).

INDICATION

The UPS must never be stored if batteries are partially or totally discharged.

LEGRAND is not liable for any damage or bad functioning caused to the UPS by wrong warehousing.

7.2 Dismantling



DANGER

Dismantling and disposal operations must be carried out only by a qualified electrician.

The instructions in this chapter are to be considered indicative: in every country there are different regulations regarding the disposal of electronic or hazardous waste such as batteries. It is necessary to strictly adhere to the standards in force in the country where the equipment is used.

Do not throw any component of the equipment in the ordinary rubbish.

7.2.1 Battery disposal



Batteries must be disposed of in a site intended for the recovery of toxic waste.

Disposal in the traditional rubbish is not allowed.

Apply to the competent agencies in your countries for the proper procedure.



WARNING

A battery may constitute a risk of electric shock and high short-circuit current.

When working on batteries, the prescriptions indicated in chapter 2 must be adhered to.

7.2.2 UPS dismantling

The dismantling of the UPS must occur after the dismantling of the various parts it consists of.

For the dismantling operations, it is necessary to wear Personal Protective Equipment.

Sub-divide the components separating the metal from the plastic, from the copper and so on according to the type of selective waste disposal in the country where the equipment is dismantled.

If the dismantled components must be stored before their disposal, be careful to keep them in a safe place protected from atmospheric agents to avoid soil and groundwater contamination.

7.2.3 Electronic component dismantling

For the disposal of electronic waste, it is necessary to refer to the relevant standards.



This symbol indicates that in order to prevent any negative effects on the environment and on people, this product should be disposed of separately from other household waste, by taking it to authorised collection centres, in accordance with the EU countries local waste disposal legislations. Disposing of the product without following local regulations may be punished by law. It is recommended to check that this equipment subject to WEEE legislations in the country where it is used.

8 Technical specifications

GENERAL CHARACTERISTICS

	3 110 60	3 110 61	3 110 62	3 110 63	3 110 64
	Keor SPE 750	Keor SPE 1000	Keor SPE 1500	Keor SPE 2000	Keor SPE 3000
Nominal power (VA)	750	1000	1500	2000	3000
Active power (W)	600	800	1200	1600	2400
Technology	Line interactive (VI)				
Waveform	sinewave (during battery mode)				
Transfer time	2-8 (typical)				
Protective class (EN/IEC 61140)	I				
Overvoltage category	OVC II				
Rated short-time withstand current (kA)	$1 \leq ICW \leq 6$				

INPUT ELECTRICAL CHARACTERISTICS

	3 110 60	3 110 61	3 110 62	3 110 63	3 110 64
	Keor SPE 750	Keor SPE 1000	Keor SPE 1500	Keor SPE 2000	Keor SPE 3000
Rated voltage (V)	230 ~ 1ph				
Range of voltage (V)	175 to 288 (at full load)				
Rated frequency (Hz)	50 / 60 \pm 3 with autosensing				
Maximum current (A)	3,66	4,88	7,33	9,77	14,67
Replaceable fuse	5x20mm F 10A	5x20mm F 10A	5x20mm F 10A	32x6mm F 20A	32x6mm F 20A
Inlet	IEC C14			IEC C20	

OUTPUT ELECTRICAL CHARACTERISTICS

	3 110 60 Keor SPE 750	3 110 61 Keor SPE 1000	3 110 62 Keor SPE 1500	3 110 63 Keor SPE 2000	3 110 64 Keor SPE 3000
Rated voltage (V)	230 ~ 1ph Battery mode: $\pm 10\%$				
Rated frequency (Hz)	50 / 60 ± 1 (battery mode)				
Maximum current (A)	3,40	4,54	6,82	9,09	13,64
Overload capacity	Normal mode 110% < load < 120% : 5 min 120% < load < 130% : 10 sec load > 130% : immediate shutdown Battery mode load > 110% $\pm 10\%$: 1.5 sec				
Outlets	6 x IEC C13	8 x IEC C13			8 x IEC C13 1 x IEC C19
Efficiency	up to 96%		up to 97%		

BATTERIES AND BATTERY CHARGER CHARACTERISTICS

	3 110 60 Keor SPE 750	3 110 61 Keor SPE 1000	3 110 62 Keor SPE 1500	3 110 63 Keor SPE 2000	3 110 64 Keor SPE 3000
Number of batteries	2	2	3	4	4
Battery type	12V – 7Ah 6 cell VRLA	12V – 9Ah 6 cell VRLA			
	valve-regulated lead-acid, maintenance free				
Operating time at 80% of the load (min)	3,7				3
Charging time	6-8 hours at 90% of the charge				

8 Technical specifications

FEATURES

	3 110 60	3 110 61	3 110 62	3 110 63	3 110 64
	Keor SPE 750	Keor SPE 1000	Keor SPE 1500	Keor SPE 2000	Keor SPE 3000
Visual Interface	7-segments display with four pushbuttons and LEDs				
Communication Ports	Dry Contacts RS232 USB type B Communication slot for SNMP Card				
Protections	Electronic protection against overloading and short-circuiting and excessive battery discharge Shutdown on reaching operating limit and overheating Automatic shutdown due to protection triggering Backfeed protection embedded Emergency Power Off (EPO)				
Outputs	2 banks (1 programmable)				

MECHANICAL CHARACTERISTICS


	3 110 60	3 110 61	3 110 62	3 110 63	3 110 64
	Keor SPE 750	Keor SPE 1000	Keor SPE 1500	Keor SPE 2000	Keor SPE 3000
Dimensions W x D x H (mm)	238 x 325 x 170		238 x 438 x 170		
Net weight with batteries (kg)	14.0±5%	14.5±5%	18.9±5%	23.0±5%	26.5±5%


CONDITIONS AMBIANTES

	3 110 60	3 110 61	3 110 62	3 110 63	3 110 64
	Keor SPE 750	Keor SPE 1000	Keor SPE 1500	Keor SPE 2000	Keor SPE 3000
Operating temperature (°C)	0 ÷ +40 (+20 ÷ +25 recommended to preserve battery life)				
Relative humidity during operation	< 95% non-condensing				
Storage temperature (°C)	-20 ÷ +70 (+20 ÷ +25 recommended to preserve battery life)				
Noise level at 1 meter (dBA)	< 45				
Protection Index (IEC 529)	IP 20				
Operating height	up to 1000 meters above sea level without derating				
Pollution degree	PD2				
Climatic class (EN 60721-3-3)	3K22				
Special climatic class (EN60721-3-3)	3Z2				
Biological class (EN60721-3-3)	3B2				
Mechanically active substances class (EN60721-3-3)	3S5				
Mechanical class (EN 60721-3-3)	3M11				

DIRECTIVES ET NORMES DE RÉFÉRENCE

Marks	CE, EAC, CMIM, UKCA
Safety	2014/35/EU Directive EN 62040-1
EMC	2014/30/EU Directive EN 62040-2

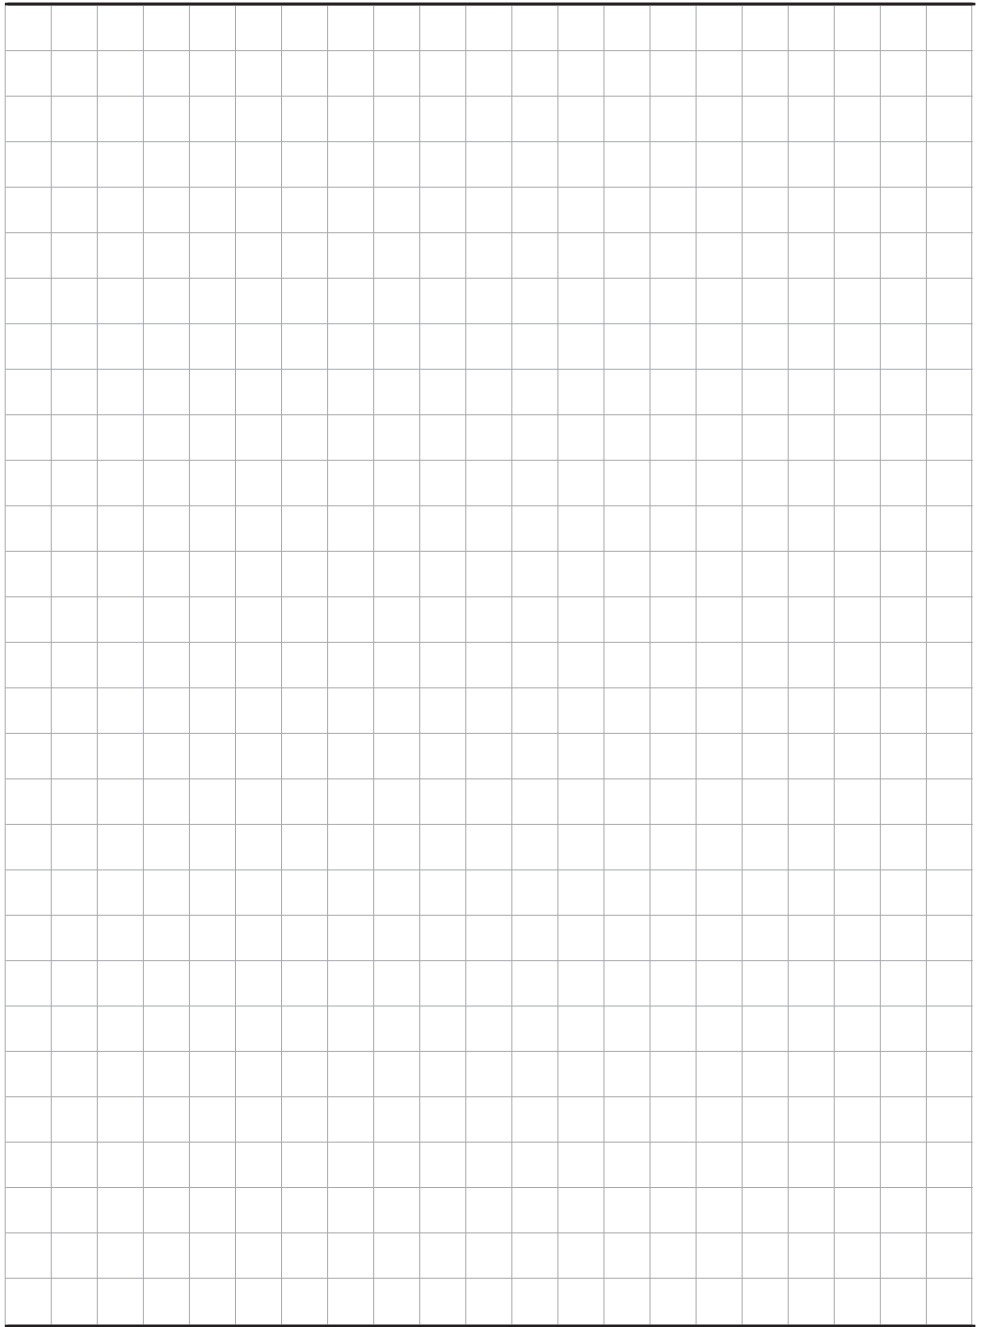

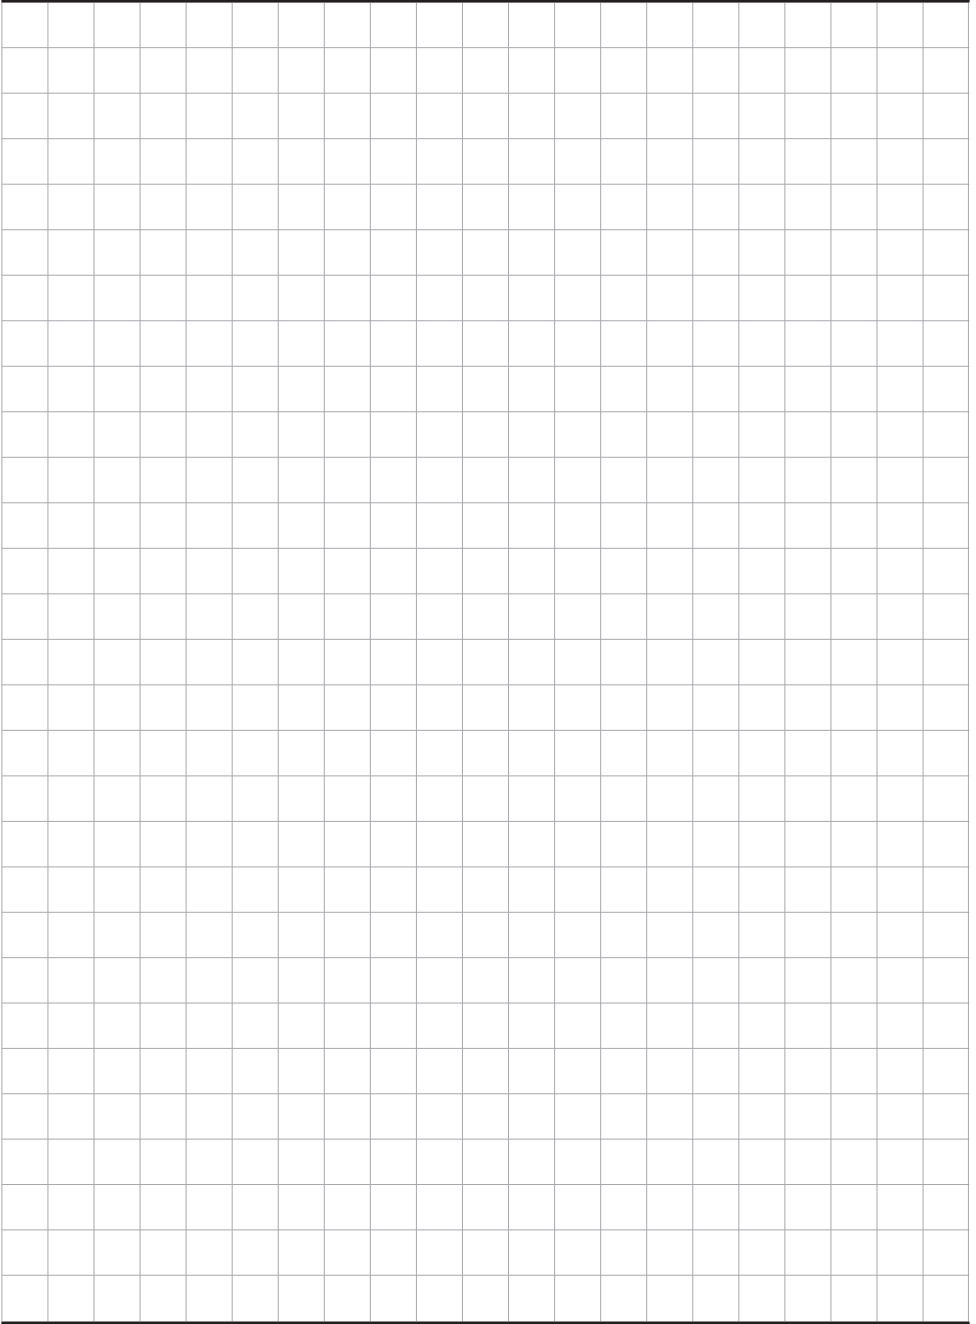

LEGRAND
Pro and Consumer Service
BP 30076 - 87002
LIMOGES CEDEX FRANCE
www.legrand.com

┌ Installer stamp ─┐

└ ─────────────────┘